



A-1

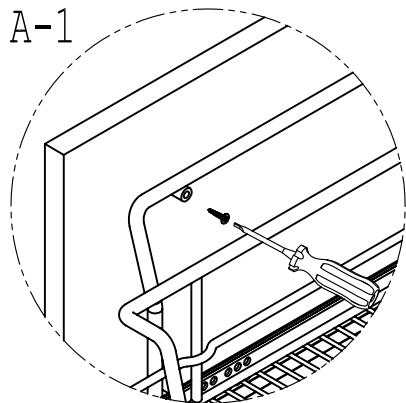


1- Put the mechanism inside of cabinet
(IMAGE A).

A-2

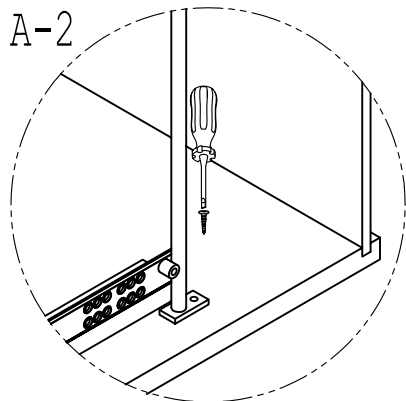

2- Fix with chip board screws to holes on the
wires.
Use fixing holes on the side wire connection
holes (A-1 A-2).

IMAGE A

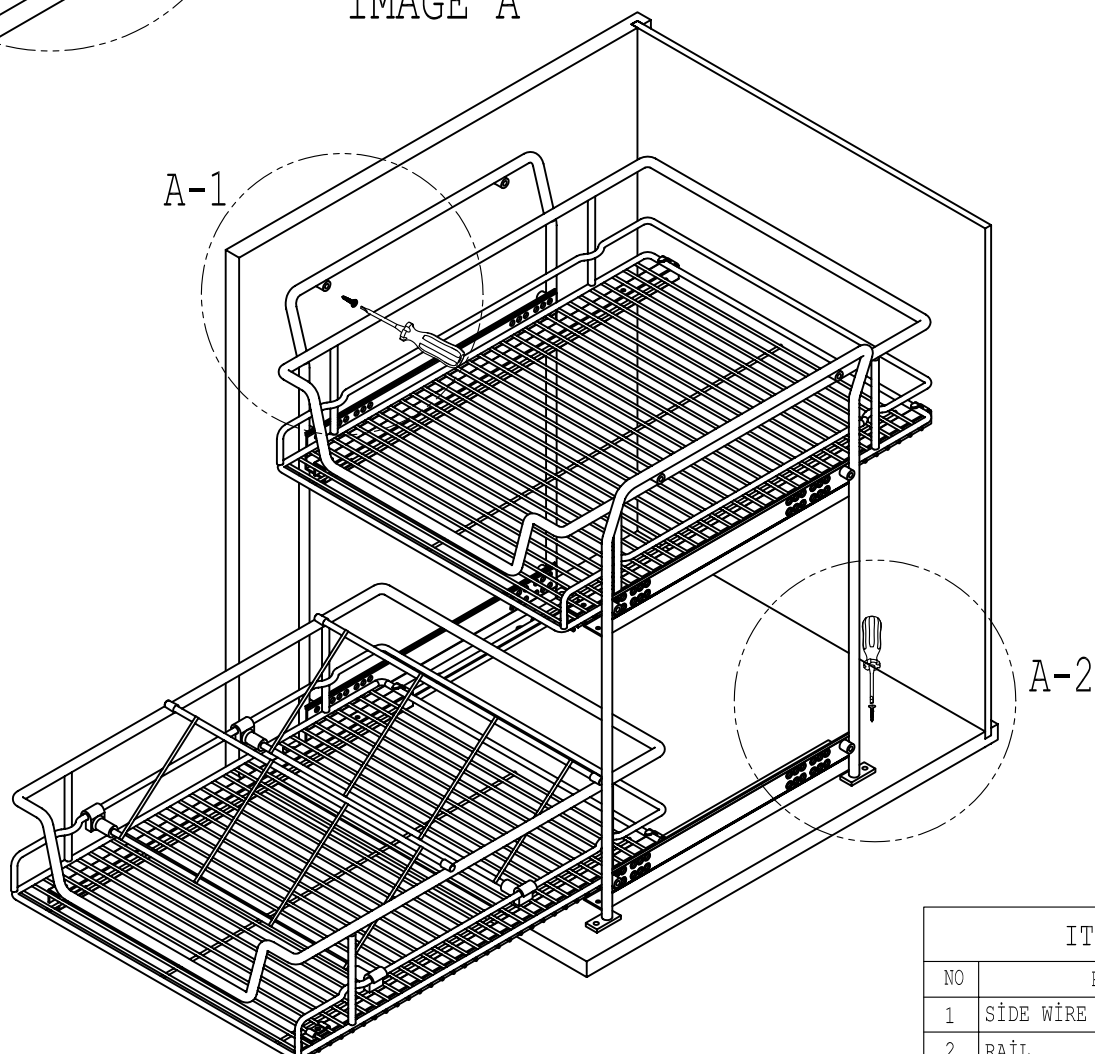

ITEMS PART

NO	PART NAME	PCS.
1	SIDE WIRE CONNECTION FRAME	2 Pcs.
2	RAIL	2 Set.
3	BASKET	2 Pcs.
4	SHOES HANGING WIRE	2 Pcs.
STOCK CODE: SMA34		IMAGE NO: RSM184